













Intended use

Your BLACK+DECKER BCASK891D SEASONMASTER™ 3-in-1 cordless multi tool system, has been designed trimming hedges, shrubs and brambles, trimming and finishing lawn edges and cutting grass in confined spaces. This tool is intended for consumer use only.

Safety instructions

General power tool safety warnings



Warning! Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

1. Work area safety

- a. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. Electrical safety

- a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**
Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

- f. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
Use of an RCD reduces the risk of electric shock.
3. **Personal safety**
- a. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b. **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f. **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**
Use of dust collection can reduce dust-related hazards.
4. **Power tool use and care**
- a. **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b. **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e. **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f. **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g. **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
5. **Battery tool use and care**
- a. **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b. **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c. **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d. **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
6. **Service**
- a. **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.



Warning! Additional safety warnings for Hedge trimmers.

- ◆ **Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material.** A moment of inattention while operating the tool can result in serious personal injury.

- ◆ **Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover.**
Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.
- ◆ **Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring.** Cutter blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- ◆ **The intended use is described in this instruction manual.** The use of any accessory or attachment or performance of any operation with this tool other than those recommended in this instruction manual can present a risk of personal injury and/or damage to property.
- ◆ **Do not carry the tool with your hands on the front handle, switch or the trigger switch unless the battery has been removed.**
- ◆ **If you have not used a hedge trimmer before, preferably seek practical instruction by an experienced user in addition to studying this manual.**
- ◆ **Never touch the blades while the tool is running. Never attempt to force the blades to come to a standstill.**
- ◆ **Do not put the tool down until the blades have come to a complete standstill.**
- ◆ **Regularly check the blades for damage and wear.** Do not use the tool when the blades are damaged.
- ◆ **Take care to avoid hard objects (e.g. metal wire, railings) when trimming.** Should you accidentally hit any such object, immediately switch the tool off and check for any damage.
- ◆ **Should the tool start to vibrate abnormally, immediately switch it off and remove the battery then check for any damage.**
- ◆ **If the tool stalls, immediately switch it off.** Remove the battery before attempting to remove any obstructions.
- ◆ **After use, place the blade sheath supplied over the blades.** Store the tool, making sure that the blade is not exposed.
- ◆ **Always ensure that all guards are fitted when using the tool.** Never attempt to use an incomplete tool or a tool with unauthorised modifications.
- ◆ **Never allow children to use the tool.**
- ◆ **Be aware of falling debris when cutting the higher sides of a hedge.**
- ◆ **Always hold the tool with both hands and by the handles provided.**
- ◆ **Keep extension cords away from cutting elements.**



Warning! Additional safety warnings for String trimmers

Warning! Cutting elements continue to rotate after the motor is switched off.

- ◆ **Be familiar with the controls and the proper use of the appliance.**
- ◆ **Always remove the battery from the appliance whenever the appliance is unattended, before clearing a blockage, before cleaning and maintenance, after striking a foreign object or whenever the appliance starts vibrating abnormally.**
- ◆ **Do not use the appliance if the cords are damaged or worn.**
- ◆ **Wear stout shoes or boots to protect your feet.**
- ◆ **Wear long trousers to protect your legs.**
- ◆ **Before using the appliance, check that your cutting path is free from sticks, stones, wire and any other obstacles.**
- ◆ **Only use the appliance in the upright position, with the cutting line near the ground.** Never switch the appliance on in any other position.
- ◆ **Move slowly when using the appliance.** Be aware that freshly cut grass is damp and slippery.
- ◆ **Do not work on steep slopes.** Work across the face of slopes, not up and down.
- ◆ **Never cross gravel paths or roads while the appliance is running.**
- ◆ **Never touch the cutting line while the appliance is running.**
- ◆ **Do not put the appliance down until the cutting line has come to a complete standstill.**
- ◆ **Use only the appropriate type of cutting line.** Never use metal cutting line or fishing line.
- ◆ **Be careful not to touch the line trimming blade.**
- ◆ **Take care to keep the mains cable away from the cutting line.** Always be aware of the position of the cable.
- ◆ **Keep hands and feet away from the cutting line at all times, especially when switching on the motor.**
- ◆ **Before using the appliance and after any impact, check for signs of wear or damage and repair as necessary.**
- ◆ **Never operate the appliance with damaged guards or without guards in place.**
- ◆ **Take care against injury from any device fitted for trimming the filament line length.** After extending new cutter line always return the machine to its normal operating position before switching on.
- ◆ **Always ensure that the ventilation slots are kept clear of debris.**
- ◆ **Do not use the lawn trimmer (edge trimmer), if the cords are damaged or worn.**

- ◆ Keep extension cords away from cutting elements.

Safety of others

- ◆ This tool is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the tool by a person responsible for their safety.
- ◆ Children should be supervised to ensure that they do not play with the appliance.

Residual risks

Additional residual risks may arise when using the tool which may not be included in the enclosed safety warnings. These risks can arise from misuse, prolonged use etc.

Even with the application of the relevant safety regulations and the implementation of safety devices, certain residual risks can not be avoided. These include:

- ◆ Injuries caused by touching any rotating/moving parts.
- ◆ Injuries caused when changing any parts, blades or accessories.
- ◆ Injuries caused by prolonged use of a tool. When using any tool for prolonged periods ensure you take regular breaks.
- ◆ Impairment of hearing.
- ◆ Health hazards caused by breathing dust developed when using your tool (example:- working with wood, especially oak, beech and MDF.)

Vibration

The declared vibration emission values stated in the technical data and the declaration of conformity have been measured in accordance with a standard test method provided by EN 60745 and may be used for comparing one tool with another. The declared vibration emission value may also be used in a preliminary assessment of exposure.

Warning! The vibration emission value during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used. The vibration level may increase above the level stated.

When assessing vibration exposure to determine safety measures required by 2002/44/EC to protect persons regularly using power tools in employment, an estimation of vibration exposure should consider, the actual conditions of use and the way the tool is used, including taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time.

Labels on tool

The following pictograms are shown on the tool along with the date code:



Warning! To reduce the risk of injury, the user must read the instruction manual.



Wear ear and eye protection



Wear gloves



Always remove the battery from the appliance before performing any cleaning or maintenance.



Beware of flying objects. Keep bystanders away from the cutting area



Do not expose the appliance to rain or high humidity.



Wear non-slip footwear.



Beware of falling objects.



Directive 2000/14/EC guaranteed sound power.

Additional safety instructions for batteries and chargers

Batteries

- ◆ Never attempt to open for any reason.
- ◆ Do not expose the battery to water.
- ◆ Do not store in locations where the temperature may exceed 40 °C.
- ◆ Charge only at ambient temperatures between 10 °C and 40 °C.
- ◆ Charge only using the charger provided with the tool.
- ◆ When disposing of batteries, follow the instructions given in the section "Protecting the environment".



Do not attempt to charge damaged batteries.

Chargers

- ◆ Use your BLACK+DECKER charger only to charge the battery in the tool with which it was supplied. Other batteries could burst, causing personal injury and damage.
- ◆ Never attempt to charge non-rechargeable batteries.
- ◆ Have defective cords replaced immediately.
- ◆ Do not expose the charger to water.
- ◆ Do not open the charger.
- ◆ Do not probe the charger.



The charger is intended for indoor use only.



Read the instruction manual before use.

Electrical safety



Your charger is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate. Never attempt to replace the charger unit with a regular mains plug.

- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or an authorised BLACK+DECKER Service Centre in order to avoid a hazard.

Features

This appliance includes some or all of the following features.

1. Power head
2. Main handle
3. Bail handle
4. On/off switch
5. Lock off switch
6. Hedge trimmer attachment
7. Hedge trimmer release button
8. Hedge trimmer blade
9. Guard
10. Extension pole
11. Pole grip
12. Extension pole release button
13. String trimmer attachment
14. String trimmer attachment release button
15. Guard
16. Spool housing
17. Spool cap
18. Spool cap release tab
19. Battery

Charging a battery (fig. A)

BLACK+DECKER chargers are designed to charge BLACK+DECKER battery packs.

- ◆ Plug the charger (19) into an appropriate outlet before inserting a battery pack (18).

- ◆ Insert the battery pack (18) into the charger, making sure the battery pack is fully seated in the battery slots (Figure A).



The LED (30a) will flash indicating that the battery is being charged.



The completion of charge is indicated by the LED remaining on continuously. The pack is fully charged and may be used at this time or left in the charger.

- ◆ Recharge discharged batteries as soon as possible after use or battery life may be greatly diminished. For longest battery life, do not discharge batteries fully. It is recommended that the batteries be recharged after each use.

Charger diagnostics (fig. B)

This charger is designed to detect certain problems that can arise with the battery packs or the power source. Problems are indicated by one LED flashing in different patterns.

Bad battery



The charger can detect a weak or damaged battery. The LED flashes in the pattern indicated on the label. If you see this bad battery

blink pattern, do not continue to charge the battery. Return it to a service center or a collection site for recycling.

Hot/cold pack delay



When the charger detects a battery that is excessively hot or excessively cold, it automatically starts a Hot/Cold Pack Delay,

suspending charging until the battery has normalized. After this happens, the charger automatically switches to the Pack Charging mode. This feature ensures maximum battery life. The light flashes in the pattern indicated on the label.

Leaving the battery in the charger

The charger and battery pack can be left connected with the LED glowing indefinitely. The charger will keep the battery pack fresh and fully charged. This charger features an automatic tune-up mode which equals or balances the individual cells in the battery pack to allow it to function at peak capacity. Battery packs should be tuned up weekly or whenever the battery no longer delivers the same amount of work. To use the automatic tune-up mode, place the battery pack in the charger and leave it for at least 8 hours.

Important charging notes

- ◆ Longest life and best performance can be obtained if the battery pack is charged when the air temperature is between 18 ° – 24 ° C. DO NOT charge the battery pack in an air temperature below +4.5 ° C, or above +40 ° C.

This is important and will prevent serious damage to the battery pack.

- ◆ The charger and battery pack may become warm to the touch while charging. This is a normal condition, and does not indicate a problem. To facilitate the cooling of the battery pack after use, avoid placing the charger or battery pack in a warm environment such as in a metal shed or an uninsulated trailer.
- ◆ If the battery pack does not charge properly:
 - ◆ Check operation of receptacle by plugging in a lamp or other appliance;
 - ◆ Check to see if receptacle is connected to a light switch which turns power off when you turn out the lights;
 - ◆ Move the charger and battery pack to a location where the surrounding air temperature is approximately 18 ° – 24 °C;
 - ◆ If charging problems persist, take the tool, battery pack and charger to your local service center.
- ◆ The battery pack should be recharged when it fails to produce sufficient power on jobs which were easily done previously. DO NOT CONTINUE to use under these conditions. Follow the charging procedure. You may also charge a partially used pack whenever you desire with no adverse effect on the battery pack.
- ◆ Foreign materials of a conductive nature such as, but not limited to, grinding dust, metal chips, steel wool, aluminum foil, or any buildup of metallic particles should be kept away from charger cavities. Unplug the charger before attempting to clean.
- ◆ Do not freeze or immerse the charger in water or any other liquid.

Fitting and removing the battery (fig. C)

- ◆ To fit the battery (18), line it up with the receptacle on the tool. Slide the battery into the receptacle and push until the battery snaps into place.
- ◆ To remove the battery, push the battery release button (18a) while at the same time pulling the battery out of the receptacle.

Installing and Removing Attachments (fig. D, E)

- ◆ To fit an attachment or the extension pole to the base unit (1), align the attachment/pole base with the power head as shown in figure D and E.
 - ◆ Firmly push the attachment or extension pole onto the base unit until it snaps into place and an audible click is heard.
- Note:** Attachments fit onto the extension pole in the same manner as the base unit.
- ◆ Ensure attachment is securely attached to the base unit or extension pole by gently pulling it away. The attachment or the extension pole should remain in place.

- ◆ To remove an attachment or extension pole, depress the release button (7), (14) or (12) located on the side of the attachment or extension pole and pull attachment or extension pole away from the base unit or extension pole.

Note: Only use attachments that are specifically designed for and are compatible with the power head.

Correct hand position (fig. F, G)

Base mode, proper hand position requires the left hand on the bail handle (3), with the right hand on the main handle (2). Pole mode, operate with the right hand on the main handle (2) and the left hand on the Pole grip (11).

Switching on

- ◆ Push the lock off switch (5) down. Squeeze the bail handle (3) and then squeeze the ON/OFF switch (2). Once the unit is running, you may release the lock off switch. The more the ON/OFF is depressed, the higher the speed of the base unit.
- ◆ In order to keep the unit running you must continue to squeeze both the bail handle and the ON/OFF. To turn the unit off, release the ON/OFF switch or bail handle.

Extended reach/Pole mode

- ◆ Push the lock off switch (5) down. Grip the Pole grip (1) and then squeeze the ON/OFF switch (2).
- ◆ Once the unit is running, you may release the lock off switch. The more the ON/OFF is depressed, the higher the speed of the base unit.
- ◆ In order to keep the unit running you must continue to squeeze the ON/OFF switch. To turn the unit off, release the ON/OFF switch.

Trimming Instructions (fig.F, G, H, I, J)

Note: keep hands away from blades. Blade may coast after turn off.

Working positions (fig F, G)

Maintain proper footing and balance and do not overreach. Wear safety goggles, non-skid footwear when trimming. Hold the unit firmly in both hands and turn the unit on. Always hold the trimmer as shown in Figures F, and G, with one hand on the main handle (3) and one hand on the bail handle (4) or Pole grip (11). Never hold the unit by the guard (9) or hedge trimmer blade (8).

Trimming new growth (fig H)

Using a wide, sweeping motion, feeding the blade teeth through the twigs, is most effective. A slight downward tilt of the blade in the direction of motion gives the best cutting.

Level hedges (fig I)

To obtain exceptionally level hedges a piece of string can be stretched along the length of the hedge as a guide.

Side trimming hedges (fig. J)

Orient the trimmer as shown and begin at the bottom and sweep up.

Note: The cutting blades are made from high quality, hardened steel and with normal usage, they will not require resharping. However, if you accidentally hit a wire fence, stones, glass, or other hard objects as shown in figure K, you may put a nick in the blade. There is no need to remove this nick as long as it does not interfere with the movement of the blade. If it does interfere, remove the battery and use a fine toothed file or sharpening stone to remove the nick. If you drop the trimmer, carefully inspect it for damage. If the blade is bent, housing cracked, handles broken or if you see any other condition that may affect the trimmer's operation contact your local BLACK+DECKER authorized service center for repairs before putting it back into use.

Fertilizers and other garden chemicals contain agents which greatly accelerate the corrosion of metals. Do not store the unit on or adjacent to fertilizers or chemicals.

With the battery removed, use only mild soap and a damp cloth to clean the unit. Never let any liquid get inside the unit; never immerse any part of the unit into a liquid. Prevent the blades from rusting by applying a film of light machine oil after cleaning.

Using the string trimmer attachment

Warning! Before assembly, make sure that the tool is switched off and the battery is removed.

Attaching the guard (fig. L, M)

Warning! Never operate trimmer without guard firmly in place. The guard must always be properly attached on the appliance to protect the user.

- ◆ Turn the trimmer upside down so that you are looking down at the spool housing (17).
- ◆ Remove the screw from the guard with a phillips screwdriver.
- ◆ Turn the guard (15) upside down and slide it fully onto the motor housing (13). Make sure the tabs (20) on the guard engage the ribs (21) on the motor housing as shown in figure L. The locking tab (22) should have snapped into the housing slot (23).
- ◆ Continue to slide the guard on until you hear it "snap" into place.
- ◆ Insert the guard screw and tighten securely as shown in figure M to complete the guard assembly.
- ◆ Once the guard is installed, remove the covering from the line cut-off blade, located on the edge of the guard.

Releasing the cutting line

For shipping purposes, the cutting line is taped to the spool housing.

- ◆ Remove the tape holding the cutting line to the spool housing.
- ◆ See "Replacing the Spool" for instructions for removing the spool.

Installing and removing attachments (fig. N)

The string trimmer attachment is locked out from being used directly on the base unit. It can only be operated with the extension pole (10).

- ◆ To fit an attachment or the extension pole to the base unit (1), align the pole base with the base unit .
 - ◆ Firmly push the extension pole onto the base unit until it snaps into place and an audible click is heard.
 - ◆ Ensure extension pole is securely attached to the base unit by gently pulling it away. The extension pole should remain in place.
- Note:** Attachments fit onto the extension pole in the same manner as the base unit.
- ◆ Ensure attachment is securely attached to the extension pole by gently pulling it away. The attachment should remain in place.
 - ◆ To remove an attachment or extension pole, depress the release button (12) or (14) located on the side of the attachment or extension pole and pull attachment away from the base unit or extension pole.

Note: Only use attachments that are specifically designed for and are compatible with the base unit.

Switching on

Warning! To reduce the risk of serious personal injury, never attempt to operate string trimmer without the extension pole.

- ◆ Push the lock off switch (5) down, squeeze the ON/OFF switch (4). Once the unit is running, you may release the lock off switch. The more the ON/OFF switch (4) is depressed, the higher the speed of the base unit.
- ◆ In order to keep the unit running you must continue to squeeze the ON/OFF switch (4). To turn the unit off, release the ON/OFF switch (4).

Correct hand position (fig. O)

Warning! To reduce the risk of serious personal injury, always hold securely in anticipation of a sudden reaction.

Correct hand position requires one hand on the main handle (3) and one hand on the bail handle (5).

Operating the trimmer (fig. P, Q, R, S)

Warning! Keep the rotating string roughly parallel with the ground (tilted no more than 30 degrees). This trimmer is not an edger. DO NOT TILT the trimmer so that the string is spinning near a right angle to the ground. Flying debris can cause serious injury.

- ◆ With the unit on, angle unit and slowly swing the trimmer side to side as shown in fig. P.

- ◆ Maintain a cutting angle of 5° to 10° as shown in Fig. Q. Do not exceed 10° (Fig R). Cut with the tip of the line.
- ◆ Maintain a minimum distance of 610 mm between the guard and your feet as shown in Fig. S.

Cutting line / line feeding

Warning! Use only BLACK+DECKER replacement spools and line. Using any other manufacturer's line can reduce performance, damage the trimmer or cause personal injury. USE ONLY 1.65 mm DIAMETER ROUND NYLON LINE. Do not use serrated or heavier gauge line, as they will overload the motor and cause overheating. This line is available at your local dealer or authorized service center.

Your trimmer uses 1.65 mm diameter, ROUND nylon line. During use, the tips of the nylon lines will become frayed and worn and the special self feeding spool will automatically feed and trim a fresh length of line. Cutting line will wear faster and require more feeding if the cutting is done along sidewalks or other abrasive surfaces or heavier weeds are being cut. The advanced automatic line feeding mechanism senses when more cutting line is needed and feeds and trims the correct length of line whenever it's required. Do not bump trimmer on ground in attempt to feed line or for any other purposes.

Helpful cutting tips

- ◆ Use the tip of the string to do the cutting; do not force string head into uncut grass.
- ◆ Wire and picket fences cause extra string wear, even breakage. Stone and brick walls, curbs, and wood may wear string rapidly.
- ◆ Do not allow spool cap to drag on ground or other surfaces.
- ◆ In long growth, cut from the top down and do not exceed 305 mm high.
- ◆ Keep trimmer tilted toward the area being cut; this is the best cutting method.
- ◆ The trimmer cuts when passing the unit from the left to right. This will avoid throwing debris at the operator.
- ◆ Avoid trees and shrubs. Tree bark, wood moldings, siding, and fence posts can easily be damaged by the string.

Accessories

Compatible with CM100 mower base sold separately.

Replacing the spool (fig.T, U, V, W, X)

Warning! To reduce the risk of serious personal injury, turn unit off and remove the battery pack before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

- ◆ Depress the spool cap release tabs (16a) and remove the spool cap (17) from the spool housing (16) in the trimmer head (fig. T).

- ◆ Grasp empty spool with one hand and spool housing with other hand and pull spool out.
- ◆ If lever (16b) (fig. U) in base of housing becomes dislodged, replace in correct position before inserting new spool into housing.
- ◆ Remove any dirt and grass from the spool and housing.
- ◆ Unfasten the end of the cutting line Fig. V and guide the line into the eyelet (16d) Fig. W.
- ◆ Take the new spool and push it onto the boss (16c) in the housing (Fig. U). Rotate the spool slightly until it is seated. The line should protrude approximately 136mm from the housing.
- ◆ Align the tabs on the spool cap with the slots in the housing (Fig. X).
- ◆ Push the cap onto the housing until it snaps securely into place.

Rewinding spool from bulk line (fig. D14, D15, D16)

Bulk line is also available for purchase from your local retailer.

Note: Hand wound spools from bulk line are likely to become tangled more frequently than BLACK+DECKER factory wound spools. For best results, factory wound spools are recommended.

To install bulk line, follow the steps below:

- ◆ Remove battery pack from trimmer.
- ◆ Remove the empty spool from the trimmer as described in "REPLACING THE SPOOL".
- ◆ Remove any remaining cutting line from the spool.
- ◆ Make a fold at the end of the cutting line at about 19mm (16g). Feed the cutting line into one of the line anchoring slots (16h) as shown in Fig. Y.
- ◆ Wind the cutting line onto the spool in the direction of the arrow on the spool. Make sure to wind the line on neatly and in layers. Do not crisscross (Fig. Z1).
- ◆ When the wound cutting line (16j) reaches the recesses (16i), cut the line. (Fig. Z).
- ◆ Fit the spool onto the trimmer as described in "REPLACING THE SPOOL".

Troubleshooting

Problem	Possible Cause	Possible Solution
Unit will not start.	Battery pack not installed properly.	Check battery pack installation
	Battery pack not charged.	Check battery pack charging requirements.
	Internal components too hot.	Allow tool to cool down.
	Attachment or extension pole not attached to the base unit.	Ensure attachment is properly seated and locked into position on the extension pole. Ensure extension pole is properly seated and locked into position on the base unit.

Battery pack will not charge.	Battery pack not inserted into charger. Charger not plugged in. Surrounding air temperature too hot or too cold	Insert battery pack into charger until LED illuminates. Plug charger into a working outlet. Refer to "Important charging notes" for more details. Move charger and battery pack to a surrounding air temperature of above 40 degrees F (4,5°C) or below 105 degrees F (+40,5°C)
Unit shuts off abruptly.	Battery pack has reached its maximum thermal limit. Out of charge. (To maximize the life of the battery pack it is designed to shut off abruptly when the charge is depleted.)	Allow battery pack to cool down. Place on charger and allow to charge.

Accessories

Other attachments are available to convert your tools to a Chainsaw or Blower.

BCASBL71B – Blower

BCASC61B – Chainsaw.

Contact your local BLACK+DECKER service centre or visit www.blackanddecker.co.uk for details

Maintenance

Your BLACK+DECKER appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

- Regularly clean the appliance using a damp cloth. Do not use any abrasive or solvent-based cleaner. Never let any liquid get inside the appliance and never immerse any part of the appliance into liquid.

Protecting the environment



Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste.

Products and batteries contain materials that can be recovered or recycled reducing the demand for raw materials. Please recycle electrical products and batteries according to local provisions.

Further information is available at www.2helpU.com

Technical data

		BCASK891D
		BCAS81B - Hedge trimmer
Input voltage	VDC	18
No load speed	CSPM	3575

		BCASST91B - String trimmer
Input voltage	V _{ac}	18
No load speed	RPM	7300

Battery		90617054
Voltage	V _{ac}	18
Capacity	Ah	2
Type		Li-Ion
Charger		90634971
Input Voltage	V _{ac}	230
Current	A	1
Approx Charge Time	min	120

Level of sound pressure according to EN 60745:

Sound pressure for Hedge trimmer (L_p) 84,5 dB(A), uncertainty (K) 1,4 dB(A)
acoustic power for Hedge trimmer (L_{wa}) 94,5 dB(A), uncertainty (K) 0,8 dB(A)

Sound pressure for Pole Hedge trimmer (L_p) 83,3 dB(A), uncertainty (K) 4 dB(A)
acoustic power for Pole Hedge trimmer (L_{wa}) 99,1 dB(A), uncertainty (K) 1,5 dB(A)

Sound pressure for String trimmer (L_p) 82,5 dB(A), uncertainty (K) 2,2 dB(A)
acoustic power for String trimmer (L_{wa}) 91 dB(A), uncertainty (K) 1,5 dB(A)

Vibration total values (triax vector sum) according to EN 60745:

Hedge Trimmer (a_{h,SG}) 2,5 m/s², uncertainty (K) 1,5 m/s²

Pole Hedge Trimmer (a_{h,SG}) 2,5 m/s², uncertainty (K) 1,5 m/s²

String Trimmer (a_{h,SG}) 2,5 m/s², uncertainty (K) 1,5 m/s²



BCASK891D SEASONMASTER™

3-in-1 cordless multi tool system

Black & Decker declares that these products described under "technical data" are in compliance with:

2006/42/EC,

hedge trimmer: EN 60745-1:2009+A11:2010,
EN 60745-2-15:2009+A1:2010,

pole-hedge trimmer: EN 60745-1:2009+A11:2010,
EN ISO 10517:2009+A1:2013,

lawn trimmer: EN 60335-1:2012+A11:2014+A13:2017,
EN 50636-2-91:2014,

These products also comply with Directive 2014/30/EU and 2011/65/EU.

For String trimmer noise:
2000/14/EC

For Lawn Trimmer, $L \leq 50$ cm, Annex VI
DEKRA Certification B.V. Meander 1051 / P.O. Box 5185
6825 MJ ARNHEM / 6802 ED ARNHEM, Netherlands
Notified Body ID No.: 0344

Level of acoustic power according to 2000/14/EC

(Article 12, Annex III, $L \leq 50$ cm):

LWA (measured sound power) 91 dB(A)

Uncertainty = 2 dB(A)

LWA (guaranteed sound power) 93 dB(A)

Hedge trimmer and pole-hedge trimmer, Annex V

Measured sound power level (LWA) 99 dB(A)

Uncertainty (K) 1,5 dB(A)

Guaranteed sound power (LwA) 101 dB(A)

For more information, please contact Black & Decker at the following address or refer to the back of the manual.

The undersigned is responsible for compilation of the technical file and makes this declaration on behalf of Black & Decker..



R. Laverick
Director of Engineering
Black & Decker Europe, 210 Bath Road, Slough,
Berkshire, SL1 3YD
United Kingdom
25/01/2018

Terms and conditions of the Black & Decker 2 year guarantee and the location of your nearest authorised repair agent can be obtained on the Internet at www.2helpU.com, or by contacting your local Black & Decker office at the address indicated in this manual.

Please visit our website www.blackanddecker.co.uk to register your new Black & Decker product and receive updates on new products and special offers.

Guarantee

Black & Decker is confident of the quality of its products and offers consumers a 24 month guarantee from the date of purchase. This guarantee is in addition to and in no way prejudices your statutory rights. The guarantee is valid within the territories of the Member States of the European Union and the European Free Trade Area.

To claim on the guarantee, the claim must be in accordance with Black & Decker Terms and Conditions and you will need to submit proof of purchase to the seller or an authorised repair agent.

Australia	Black & Decker (Australia) Pty. Ltd. 20 Fletcher Road, Mooroolbark, Victoria, 3138	Tel. Fax	03-8720 5100 03-9727 5940
New Zealand	Black & Decker 5 Te Apunga Place Mt Wellington Auckland 1060	Tel. Fax	+64 9 259 1133 +64 9 259 1122
United Kingdom & Republic Of Ireland www.blackanddecker.co.uk emeaservice@sbdinc.com	Black & Decker 210 Bath Road Slough, Berkshire SL1 3YD	Tel. Fax	01753 511234 01753 512365
